



### INCLUDED

- 1x LED light bar
- 1x Wireless remote controller
- 2x Plastic mounting brackets
- 8x 6mm x 20 bolts
- 8x 6mm flat, lock washers and nuts
- 4x 6mm x 35 mounting bolts
- 4x 6mm flat, lock washers and nuts

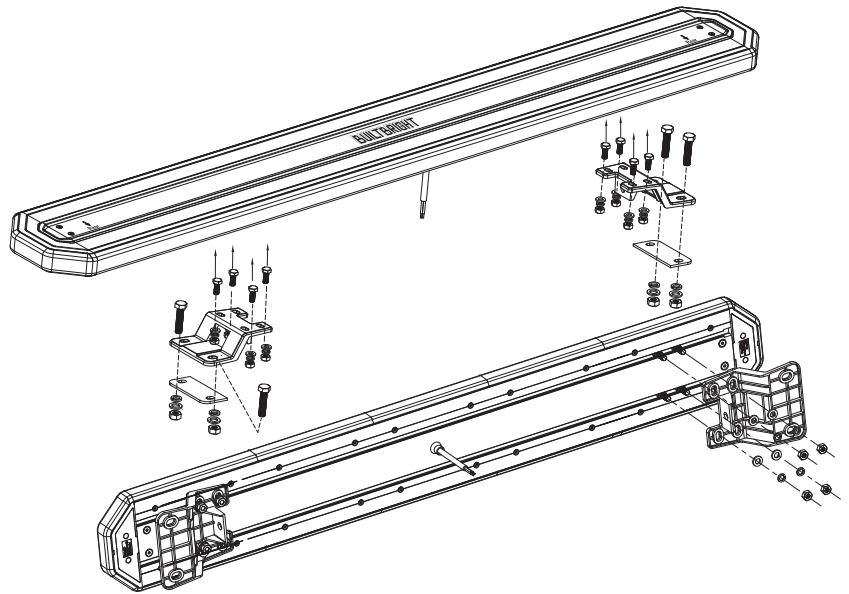

### INSTALLATION

The LED light bar is engineered to be mounted using the included mounting brackets and hardware for your specific type of installation. To ensure proper placement of your LED light bar it is recommended that you measure and mark your preferred location prior to installation or seek professional installation assistance.

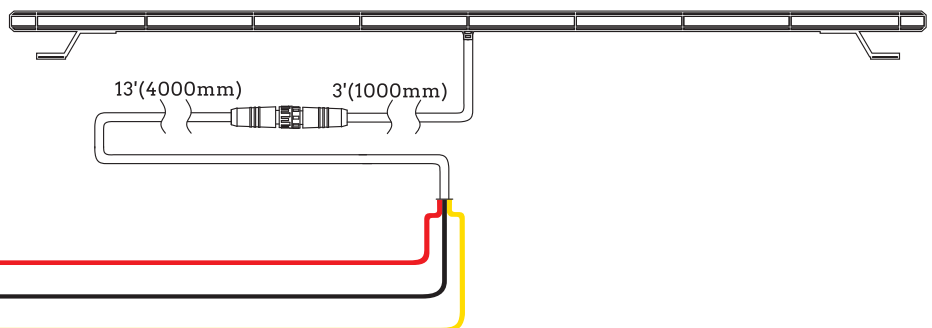

### WIRING

**Red** - To +VDC

**Black** - To chassis ground

**Yellow** - To select the flash pattern, use either the wireless remote control (refer to TABLE 2) or the yellow trigger wire (refer to WIRING). Connect the yellow wire to +VDC:

- < 1 second to choose the next pattern.
- 2-4 seconds to select the previous pattern.
- >5 seconds to clear the pairing address with the remote control.

### FLASH PATTERNS

1	Single Flash, ECE R65 Class 2 (by Day)	9	Tracking Flash: Alt. In & Out	17	Combined Single Flash
2	Single Flash, ECE R65 Class 1 (by Night)	10	Tracking Flash	18	Combined Triple Flash
3	Double Flash	11	Cruise	19	Dual Pole Clockwise Rotating
4	Triple Flash Alt. Front & Back /All	12	Center Arrow	20	Dual Pole Anti-Clockwise Rotating
5	Triple Flash Alt. Middle/Two Ends/All	13	Left Arrow	21	Quad Pole Clockwise Rotating
6	All(Single Flash)/All (Quad Flash)	14	Right Arrow	22	Quad Pole Counter-Clockwise Rotating
7	Single Flash: Alt. Left & Right Half	15	Cluster Alternating Single Flash	23	Stacking Flash
8	Triple Flash: Alt. Left & Right Half	16	Cluster Alternating Triple Flash		

### REMOTE CONTROL



WIRELESS REMOTE CONTROLLER	
BUTTON	FUNCTION
	Power ON/OFF the remote control.
Set	<b>Pairing/Unpairing the Remote Control with the Light Bar</b> <b>To Pair:</b> Press and hold the button on the remote control for 5-7 seconds. <b>To Unpair:</b> Press and hold the button on the remote control for more than 10 seconds. <b>Note:</b> The remote control and the light bar are pre-paired by the manufacturer. You only need to pair them if they become unpaired.
Cruise	Cruise (Steady Burn)
	Press the UP arrow to change to the previous pattern. Press the DOWN arrow to change to the next flash pattern.
Dimming	Press to switch between two brightness modes. (Day Mode and Night Mode)
	LEFT traffic advisor
	CENTER OUT traffic advisor
	RIGHT traffic advisor
1 2	<b>Preset Mode 1 &amp; 2:</b> Preset Mode 1 and 2 are pre-programmed favorite modes. To save the current flash pattern to a preset mode, press and hold the button for more than 2 seconds.

### WARRANTY



ARC Lighting provides a 5 year warranty against manufacturing defects from date of purchase. If warranty service is needed, please contact the authorized dealer of where your product(s) were originally purchased.

Customer Support:

- Phone: (888)608-2220
- Email: support@arc.lighting
- Website: www.arc.lighting/warranty-claim



**BUILT BRIGHT™**  
BASTROP, TEXAS 78602  
UNITED STATES OF AMERICA  
WWW.BUILT-BRIGHT.COM



**⚠ WARNING: CANCER  
AND REPRODUCTIVE HARM**  
WWW.P65WARNINGS.CA.GOV